THE SHARPER IMAGE®

High Brightness LED Booklight

SI289 Instructions

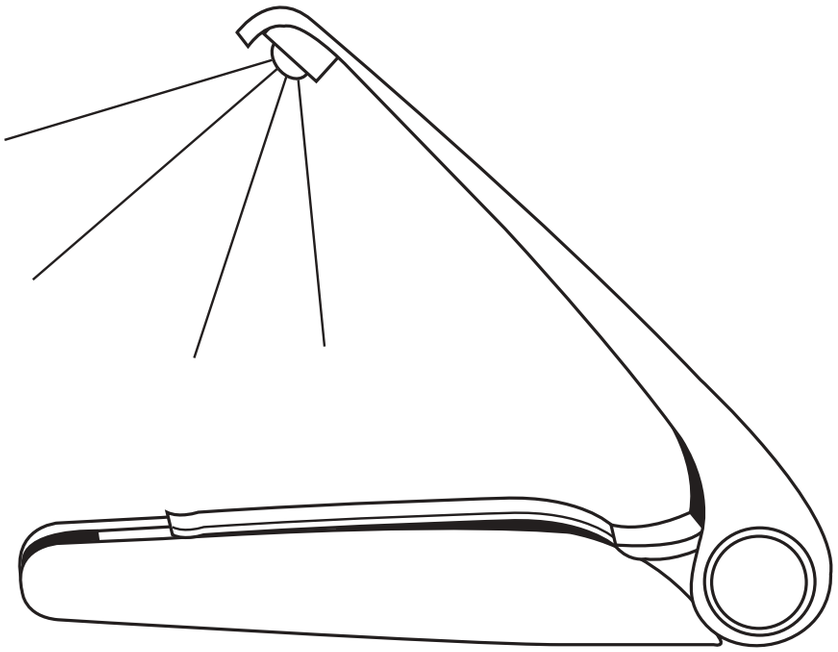

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer
Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service, or go to **www.sharperimage.com**, *our complete online store.*

Installing Batteries

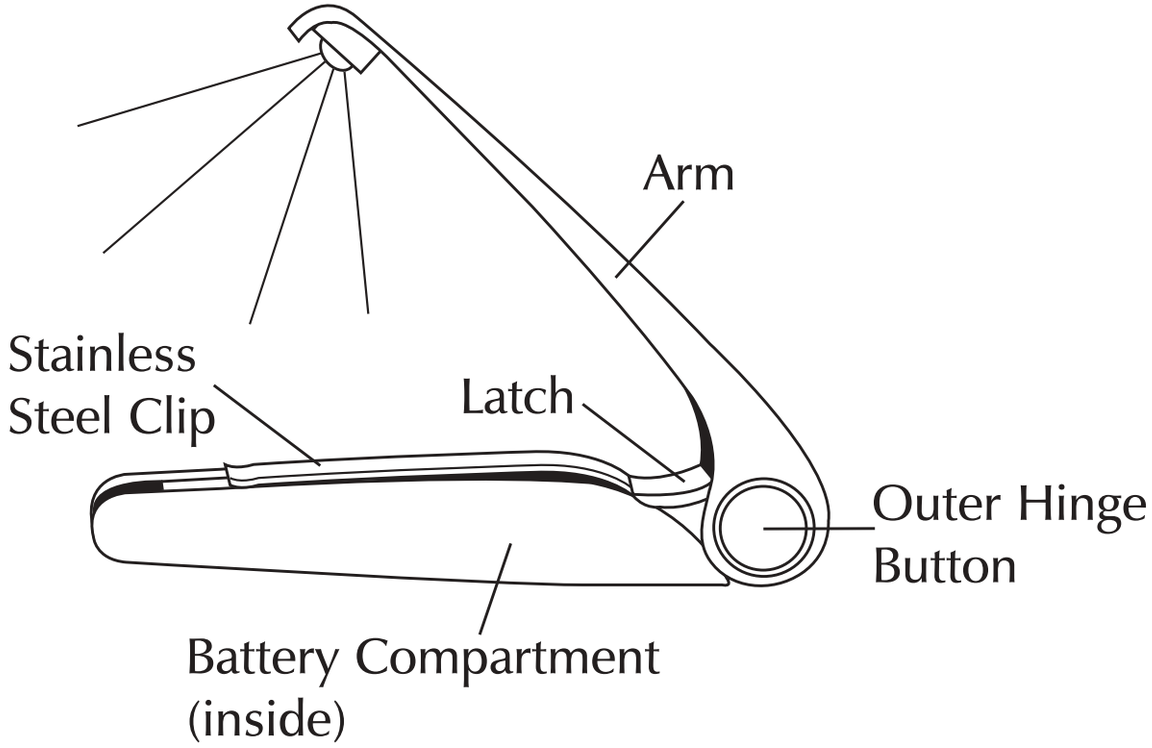

1. To release the arm, press the outer hinge buttons.
2. To open the battery compartment, pull back on the latch above the stainless steel clip.

Installing Batteries

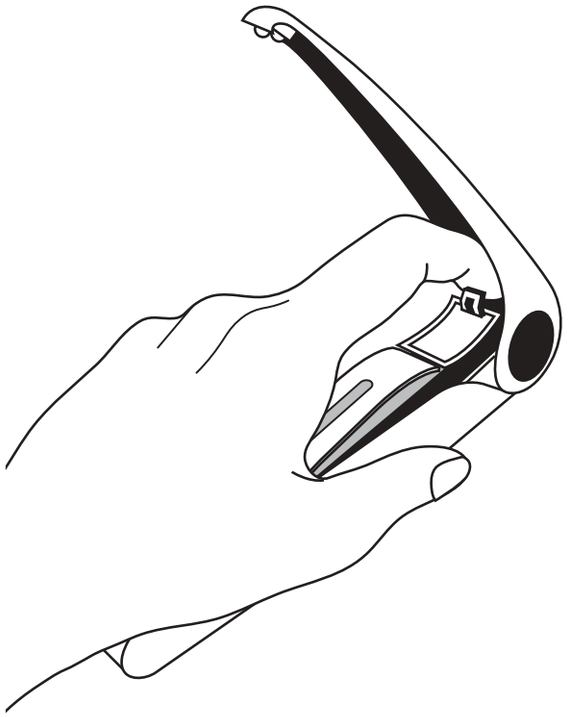

Note: After lifting the latch, slide the compartment cover toward the outer hinge button then remove it.

3. Insert the batteries one at a time, observing proper +/- polarities as indicated. The LEDs illuminate once the batteries are properly installed.
4. To replace the battery compartment cover, ensure that the stainless steel clip is facing up. Slide the cover's two "teeth" into the compartment first, then press the cover down so the latch locks into place.

Operating Booklight

1. To release the arm, press the outer hinge buttons. The LEDs automatically illuminate.
2. Slide book cover into the stainless steel clip, or rest upright on any flat surface.
3. Adjust the light to the desired position. The ratcheting mechanism holds the arm in place.
4. To turn off the LEDs, lower the arm and snap it closed.

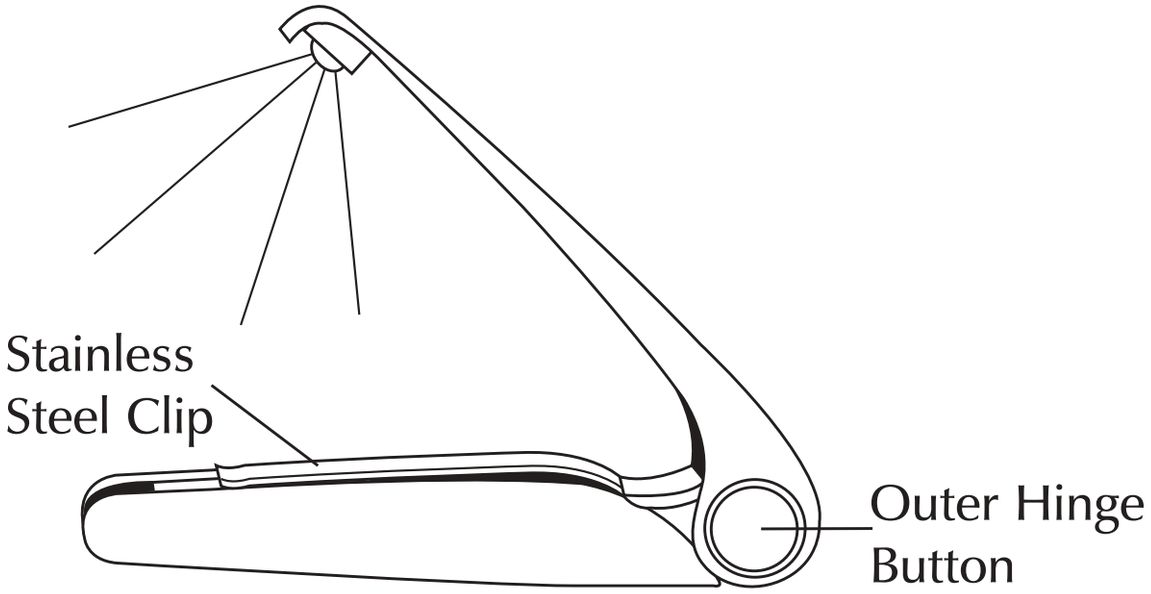

FULL ONE-YEAR WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V2 07/03 Printed in China.